

Thank you for choosing the Franklin FOLD-N-GO® Golf Toss tailgate game. We are confident that Franklin FOLD-N-GO® Golf Toss will provide you, your family and friends with hours of enjoyment. To accommodate the limited space tailgating sometimes involves, all Franklin tailgate games provide a range of playing distances with the furthest distance being regulation. Please be sure to use care when playing and to take into account others in the area before selecting a playing area and distance.

Players:


2 or 4

Parts List:


- | | |
|--|-----------------------|
| (2) Target Frames, each consisting of: | (6) Golf Tosses: |
| (2) collapsible side frames with legs | (3) red |
| (1) blue cross bar | (3) blue |
| (1) red cross bar | (1) carry bag |
| (1) yellow cross bar | Instructions Included |
| (1) white base cross bar | |

Setup:

Begin by assembling both targets (See illustration below.) Locate a level playing area 30ft x 10ft (9.144m x 3.05m) and place targets at either end as shown in the court layout section.

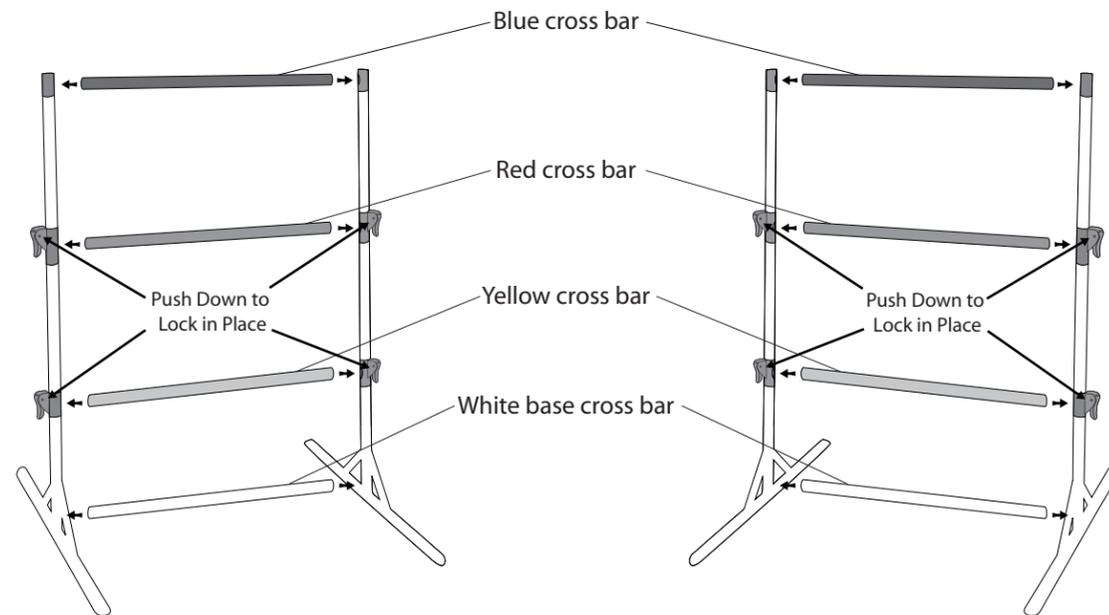

Court Layout:

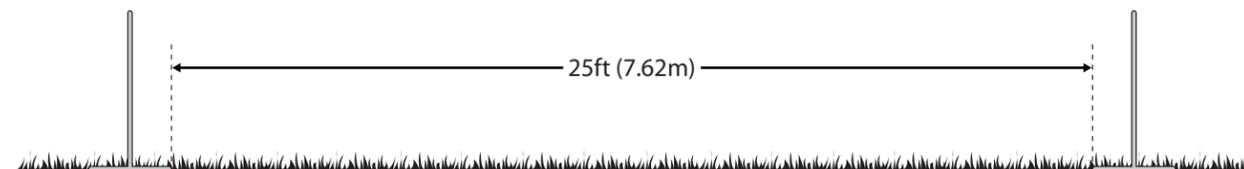

Getting Started:

The game is started by selecting which player will go first. This is done by one player flipping a coin in the air and the opposing player guessing which side will land face up, heads or tails. If the opposing player guesses correctly, they can choose to go first or last.

Golf Toss:

The object of the game is to toss your golf tosses at the target and score more points than your opponent by attaching the golf tosses to the different levels on the target. Players ages 13+ should stand 25ft (7.62m) from the target. The distance can be shortened if space is limited. Players ages 8-12 should stand 15ft (4.572m) from the target.

Game:

A regulation golf game is 21 points or nine rounds, whichever comes first. One round consists of both players tossing their four golf tosses in an alternating pattern. You must win by two or more points. If the game is tied after nine rounds, additional rounds are played to determine a winner. The winner of each round shoots first in the next round. Players alternate tossing golf tosses until all tosses have been played.

Key Points:

1. Golf tosses can be tossed many ways. However, the most effective way to toss your golf toss is to place the lanyard between your middle and forefinger with the golf ball laying in between your fingers. A gentle underhand toss and release motion will give you the best chance of attaching the golf toss to the target.
2. Players alternate tosses until all golf tosses have been played.
3. Points are scored as follows:
 - 3 points for landing on the top level
 - 2 points for the middle level
 - 1 point for the bottom level